




BS - 3007
 $\frac{3}{4}$ " THICK
 2 $\frac{3}{4}$ " WIDE

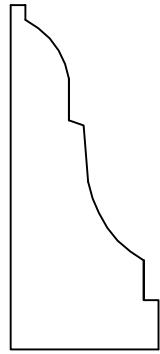


BS - 3000
 $\frac{3}{4}$ " THICK
 1 $\frac{3}{4}$ " WIDE

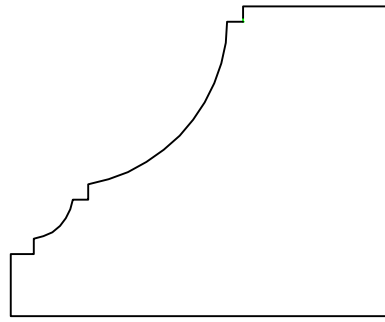


BS - 3006
 1 $\frac{9}{16}$ " THICK
 1 $\frac{15}{16}$ " WIDE

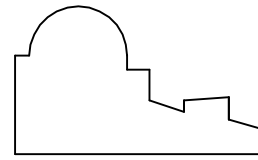


BS - 3008
 $\frac{3}{4}$ " THICK
 1 $\frac{1}{4}$ " WIDE




BS - 3004
 $\frac{3}{8}$ " THICK
 $\frac{15}{16}$ " WIDE

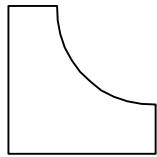


BS - 3001
 $\frac{3}{4}$ " THICK
 $\frac{3}{4}$ " WIDE

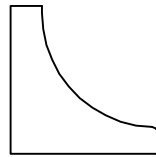

BS - 3014
 $\frac{3}{4}$ " THICK
 $\frac{3}{4}$ " WIDE




BS - 3009
 $\frac{11}{32}$ " THICK
 $\frac{1}{2}$ " WIDE

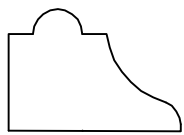


BS - 3012
 $\frac{5}{8}$ " THICK
 $\frac{7}{8}$ " WIDE



BS - 3002
 $\frac{3}{4}$ " THICK
 $\frac{1}{2}$ " WIDE

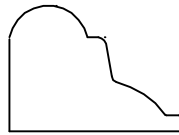



BS - 3011
 $\frac{5}{8}$ " THICK
 $\frac{7}{8}$ " WIDE




BS - 3013
 $\frac{17}{32}$ " THICK
 $\frac{13}{16}$ " WIDE

Base Shoe Moulding



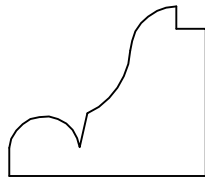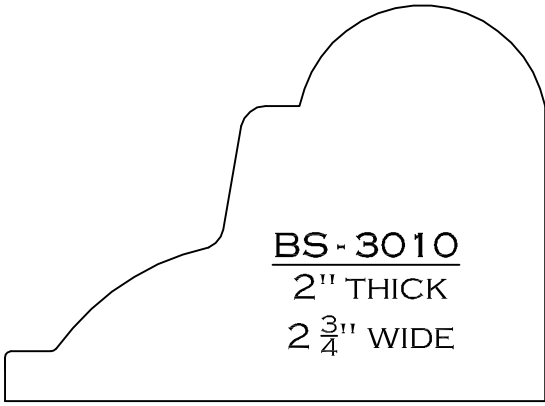

BS-3005
 $\frac{7}{8}$ " THICK
1" WIDE

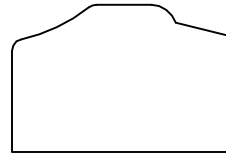

BS-3003
 $\frac{3}{4}$ " THICK
1 $\frac{1}{8}$ " WIDE

Base Shoe Moulding



Tel 1-800-792-0695 Fax 717-859-5966 customturnings.com

BS 2